

# Upgrade FingerPrinter USB Drive to be Vista-Ready In Three Steps

## Before You Start

1. This upgrade can only be done in Windows XP/2000 environment.
2. Please ensure all USB flash devices have been removed from the USB ports.

## Step 1: Insert FingerPrinter USB Drive

**Step 1a:** Insert your FingerPrinter USB Drive into USB port.


**Step 1b:** A window will pop up. Click on the “Back Arrow” to close the window.



## Step 2: Run the Upgrade .exe file

**Step 2a:** Double-click on the FPUUpgrade.exe file.

**Step 2b:** The pop-up window for the FPUUpgrade v1.0.2.8 will appear. Click on the “Upgrade” button.

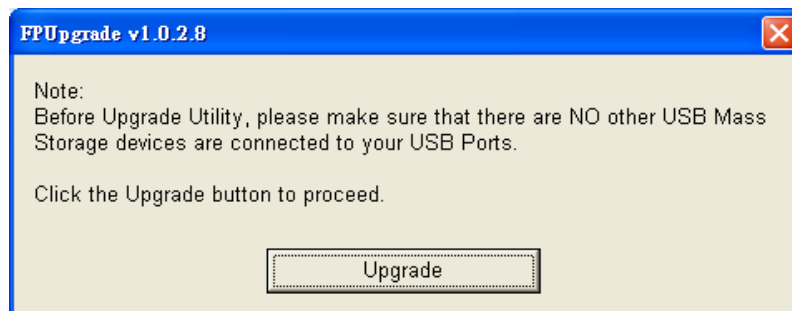

**Step 2c:** Please allow 10-20 seconds for the upgrade.

**Step 2d:** Upon completion, click “OK” to exit.




### Step 3: Verify if the Upgrade is Successful

 **Step 3a:** Remove and re-insert the FingerPrinter USB Drive.

**Step 3b:** In “My Computer”, right click on the CD Drive Partition for the *FingerPrint USB Device* and click “Open”.



**Step 3c:** Move your mouse on the “FingerPrint.exe” file. The File Version should read “1.0.2.8”.

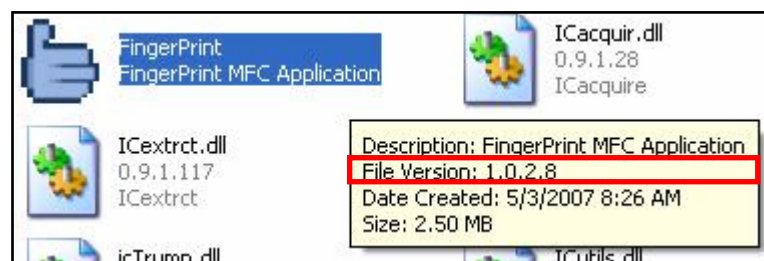

## Appendix

As FingerPrinter USB Drive is inserted into the USB port, the FingerPrinter Menu window will appear differently between Windows XP and Windows Vista Operating System as shown as below.

Windows XP Menu



Windows Vista Menu

